


march 2021

CABLE INSTAL

QUESTIONS → 725-2753
Info@Linnhaven.com

quick →

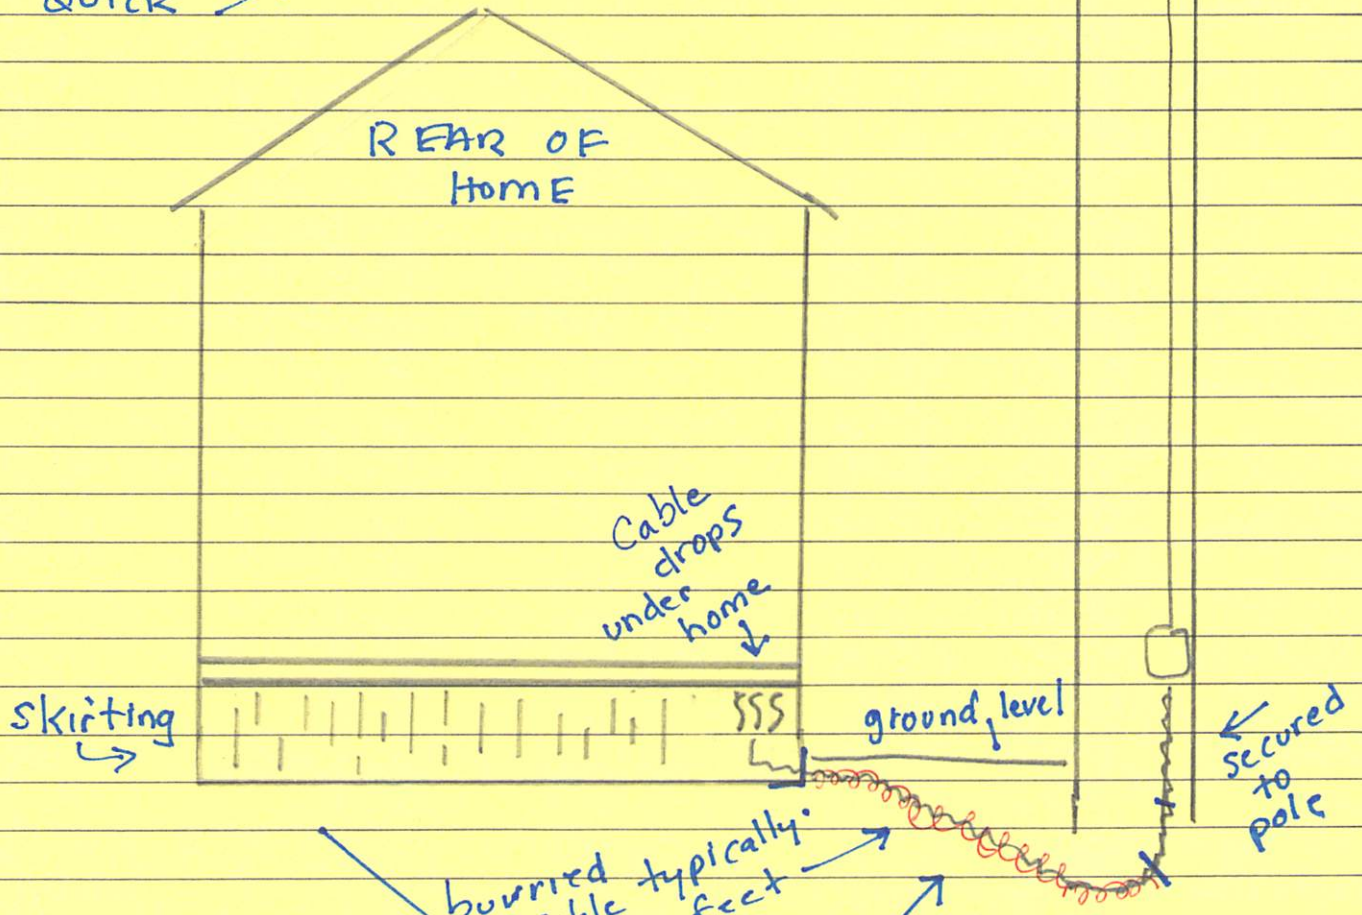

buried cable typically 2 or 3 feet 5" deep

* DO NOT LAY ON TOP OF GROUND OR WE WILL CUT IT - PROMISE

This part must be buried at instal not later - otherwise we will cut it - Promise!

* DO NOT DRILL HOLES IN SIDE OF HOME OR SKIRTING

* When the job is done the only part of cable you should see is whats attached to pole

Bring cable in underneath the Skirting Bottom rail

